



Liberate

Assembly Instructions


Parts List



① Gas-lift (1x)




② Gas-lift (1x)

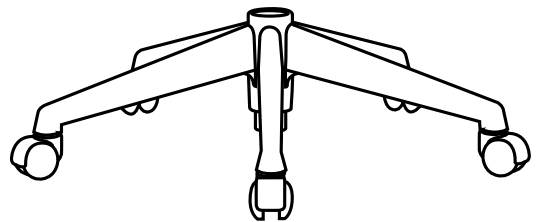

③ Base (1x)

Semi Installation: Fix Gas-Lift and Base

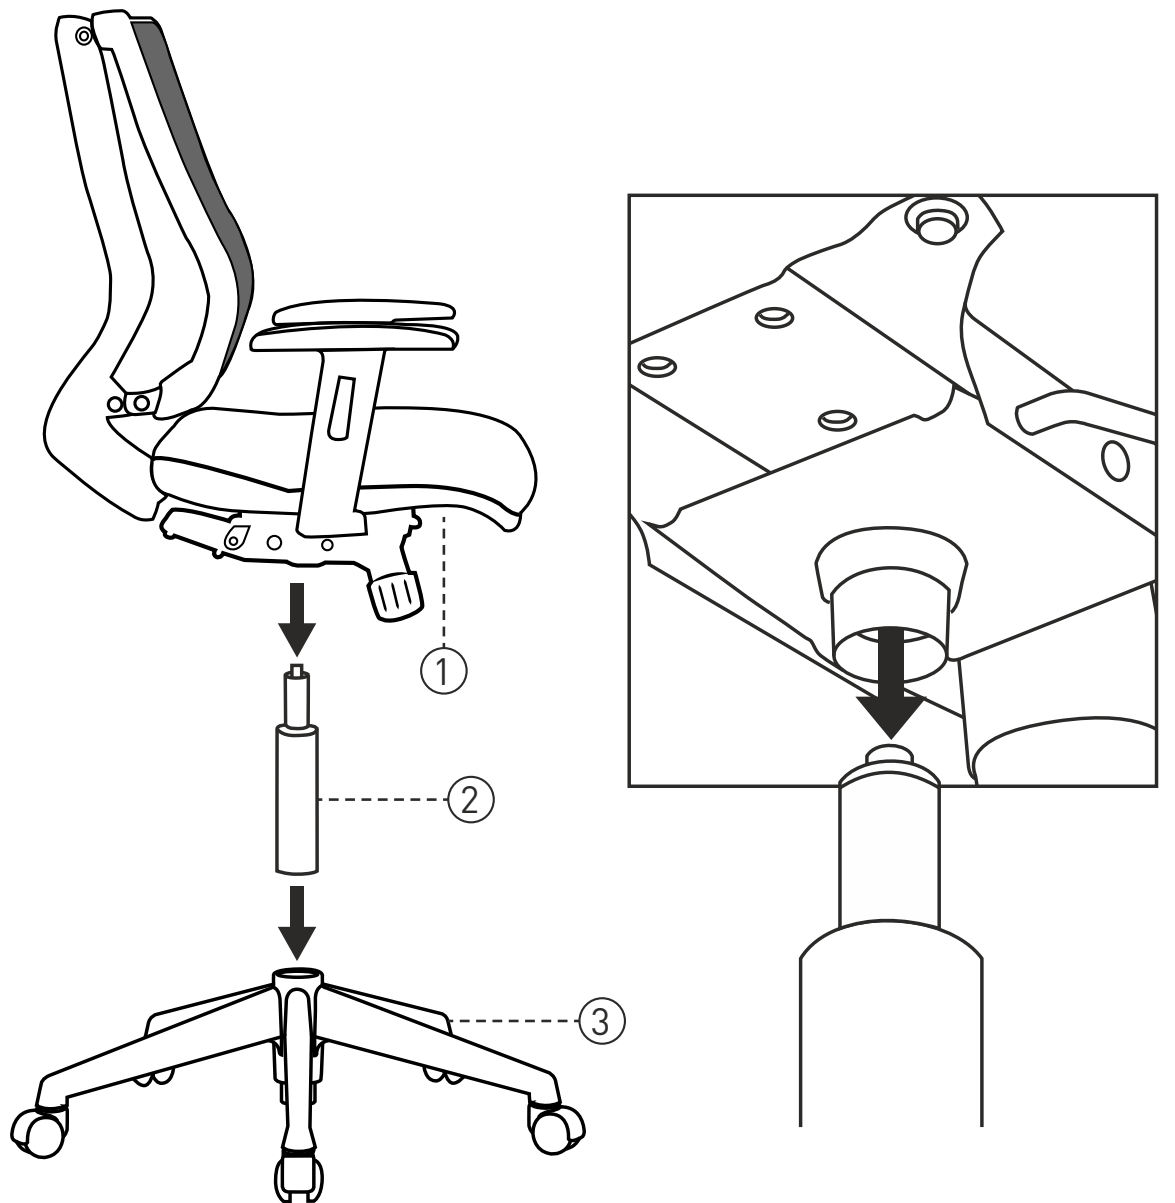

② Gas-lift (1x)

③ Base (1x)